

Oil Level Regulators for Lubricators Installation of LR500 Series


The LR500 Series Level Regulators automatically add oil to a lubricator to maintain the factory-recommended level. This function eliminates the work time necessary for manual checks and refills.

Each model has a low-level shut-down switch to protect equipment when oil supply is lost. If the lubricator oil level drops below the minimum operations level, the low-level switch will operate an alarm and/or shut down the equipment.

Model LR579 is for Lincoln lubricators. It features an adjustable low-level shut-down contact.

LR589 is for Lincoln lubricators, and the LR589NC is the normally closed-wired version of the LR589. Both LR589 products contain a mercury bulb inside a hermetically-sealed mercury switch.



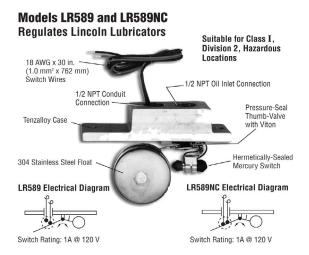


Dimensions

LR579

4-7/16 in. (113 mm) 9/32 in. (7 mm) 1-1/2 in diameter \bigcirc 2-places (38 mm) (127 mm) Contact 1 Inch Adjustment .Hex Screw Vent Tube 1/4 inch (6 mm) Float

LR589/LR589NC

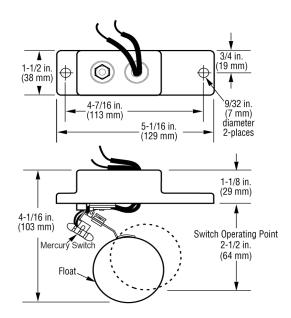

In order to consistently bring you the highest quality, full-featured products, we reserve the right to change our specifications and designs at any time. FW MURPHY product names and the FW MURPHY logo are proprietary trademarks. This document, including textual matter and illustrations, is copyright protected with all rights reserved. (c) 2021 FW MURPHY. A copy of our typical warranty may be viewed or printed by going to www.fwmurphy.com/warranty.




WARNING!

Before beginning installation of this FW Murphy product:

- Disconnect ALL electrical power to the machine.
- Make sure the machine CANNOT operate during installation.
- Follow all safety warnings of the machine manufacturer.
- Read and follow all installation instructions.
- Remove the cover on a vacant cell of the lubricator (DO NOT install in bays next to crank arm).
- Bolt the level regulator in place using the bolts that held the cover.
- 3. Connect the flex hose from the oil reservoir to the oil inlet at the level regulator. Oil reservoir must be at least two feet (0.61 meters) above the level regulator.
- 4. Wire switch for alarm and/or shutdown. One switch can be used to shut down all equipment supplied by a common oil reservoir.

Typical Wiring for LR579

Typical Wiring for LR589

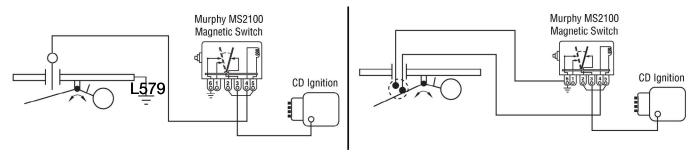

How to Order

Part Number	Model and Description	Notes
Specify Model When Ordering	LR579	
	LR589	
	LR589NC	

Approximate Shipping Weight and Dimensions			
Model	Weight	Dimension	
LR579	12 oz. (340 g)	4-3/4 x 4-3/4 x 2-3/4 in. (121 x 121 x 70 mm)	
LR589 or LR589NC	13 oz. (368 g)	4-3/4 x 4-3/4 x 3-1/4 in. (121 x 121 x 83 mm)	

FW MURPHY PRODUCTION CONTROLS

SALES, SERVICES & ACCOUNTING 4646 Ś. HARVARD AVE. TULSA, OK 74135

MANUFACTURING

2151 RANDON DYER ROAD ROSENBERG, TX 77471

5757 FARINON DRIVE SAN ANTONIO, TX 78249 **DOMESTIC SALES & SUPPORT**

FW MURPHY PRODUCTS PHONE: 918 957 1000 Email: Info@fwmurphy.com WWW.FWMURPHY.COM

FW MURPHY CONTROL SYSTEMS & SERVICES

PHONE: 281 633 4500

EMAIL: CSS-SOLUTIONS@FWMURPHY.COM

INTERNATIONAL SALES & SUPPORT

CHINA

PHONE: +86 571 8788 6060 EMAIL: INTERNATIONAL@FWMURPHY.COM

LATIN AMERICA & CARIBBEAN PHONE: +1 918 770 8775 EMAIL: INTERNATIONAL@FWMURPHY.COM

SOUTH KOREA

PHONE: +82 70 7951 4100

EMAIL: INTERNATIONAL@FWMURPHY.COM



FM 668576 (San Antonio, TX - USA) FM 668933 (Rosenberg, TX - USA)



FM 523851 (China)

TS 589322 (China)