



**READ FIRST - IMPORTANT!**  
**Tattletale Annunciators and Magnetic Switches**  
**518PH/518APH/518E**

sect. 25 00-02-1151  
 rev. 2018/06/21

Please read the Installation Manual (P/N 00-02-0187) before installing the 518PH/518APH/518E. The latest version and product support can be found at: [support.enovationcontrols.com](http://support.enovationcontrols.com), then search for Tattletale Annunciators and Magnetic Switches.

Alternately, scan this QR Code:



Inventory Control Bar Code:



**Quick Specifications:**

**Case:** Polycarbonate

**Contact Rating:** 10 A

**Coil Circuit Resistance:**

339 ohms ± 10% 12 Volt

678 ohms ± 24 Volt

**Minimum Latch Voltage:**

12 volt model: 10 VDC

24 volt model: 20 VDC

**Minimum Latch Current:**

12 volt model: 30 mA


24 volt model: 30 mA

**Operating Temperature Range:** -40°F to +176°F (-40°C to +80°C)

Please see the reverse side for additional product-specific information if needed.

**Typical Wiring Diagrams**


**Figure 1**

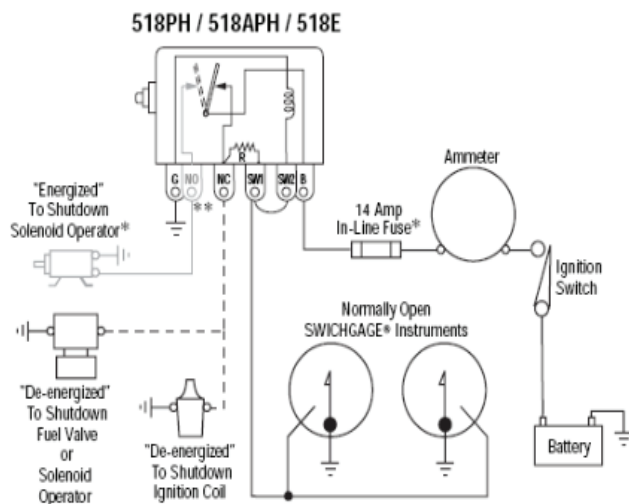

\* In-Line Fuse should be removed on "energized" to shutdown configurations.

\*\* Applies to 518APH model.

**Figure 2**

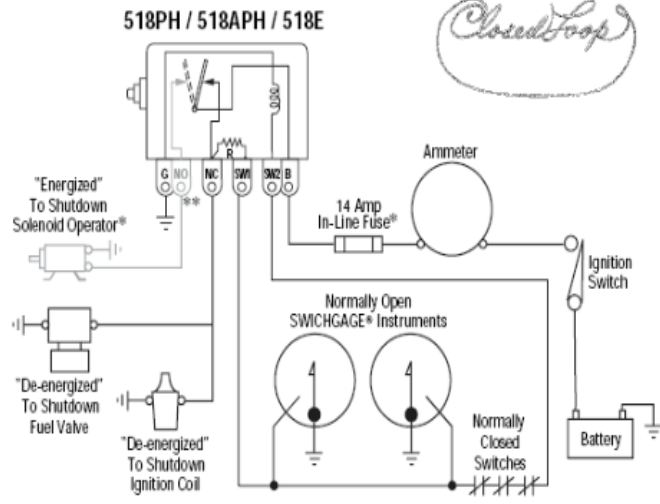

\* In-Line Fuse should be removed on "energized" to shutdown configurations.

\*\* Applies to 518APH model.

© 2018 Enovation Controls, LLC 5311 South 122nd East Avenue Tulsa, Oklahoma 74146 USA  
 Phone +1 918 317 4100 E-mail: [sales@enovationcontrols.com](mailto:sales@enovationcontrols.com) Web: [enovationcontrols.com](http://enovationcontrols.com)